SKILLING, HELLE, CHRISTIANSEN, ROBERTSON — Structural & Civil Engineers


PROJECT: THE WORLD TRADE CENTER

TITLE: CONSTRUCTION JOINT DETAIL

DATE: 12-3-68

REVISIONS


1-3-69

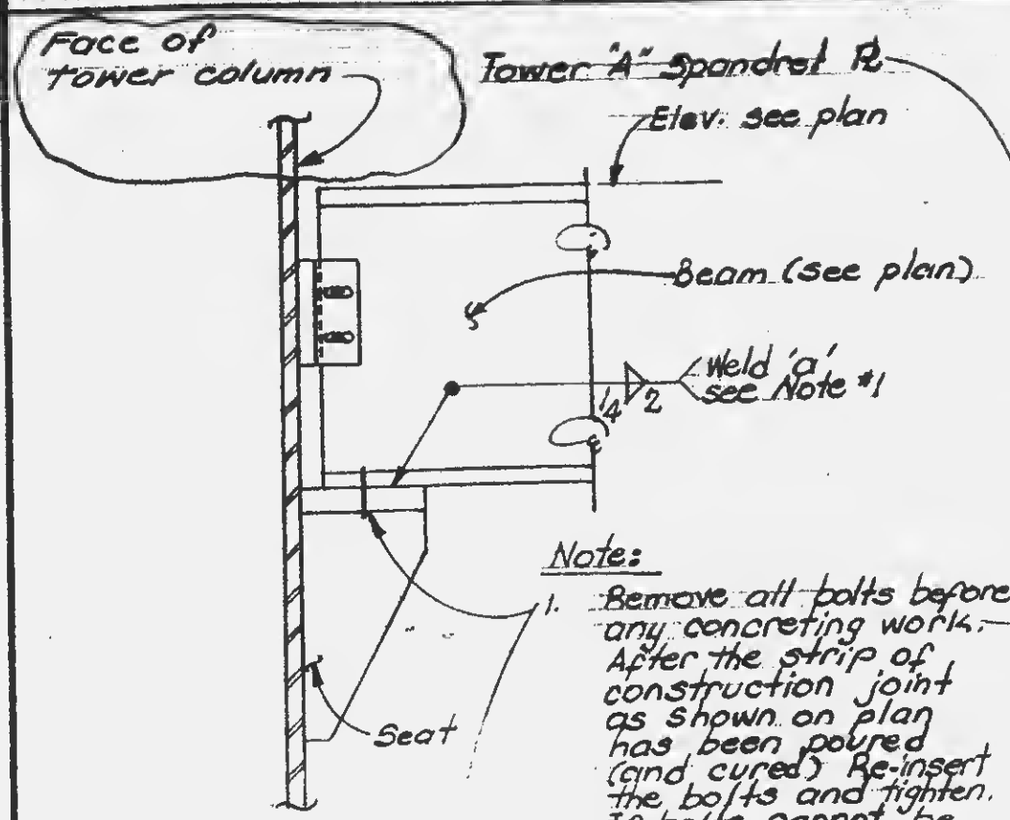


TYPE A

Note:


1. Remove all bolts before any concreting work. After the strip of construction joint as shown on plan has been poured (and cured) Re-insert the bolts and tighten. If bolts cannot be inserted into the holes due to temperature changes, use Weld 'a'

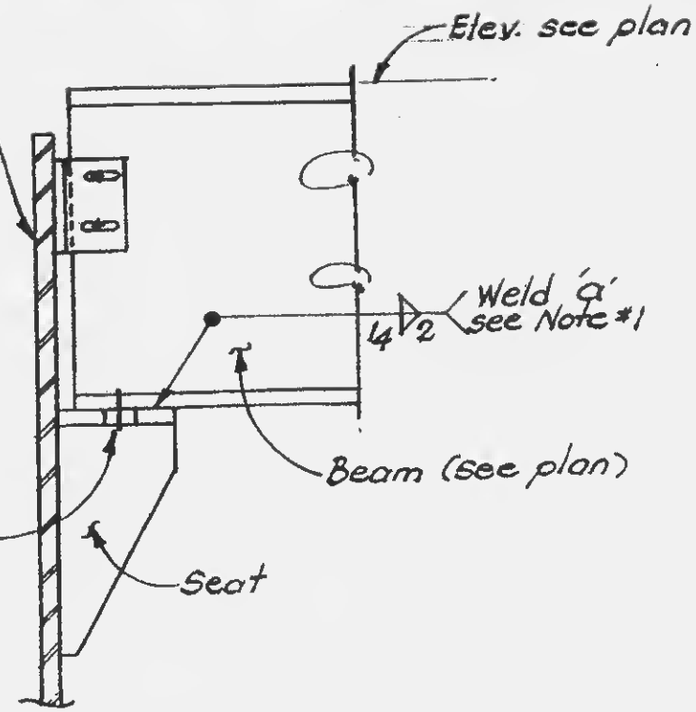

TYPE C

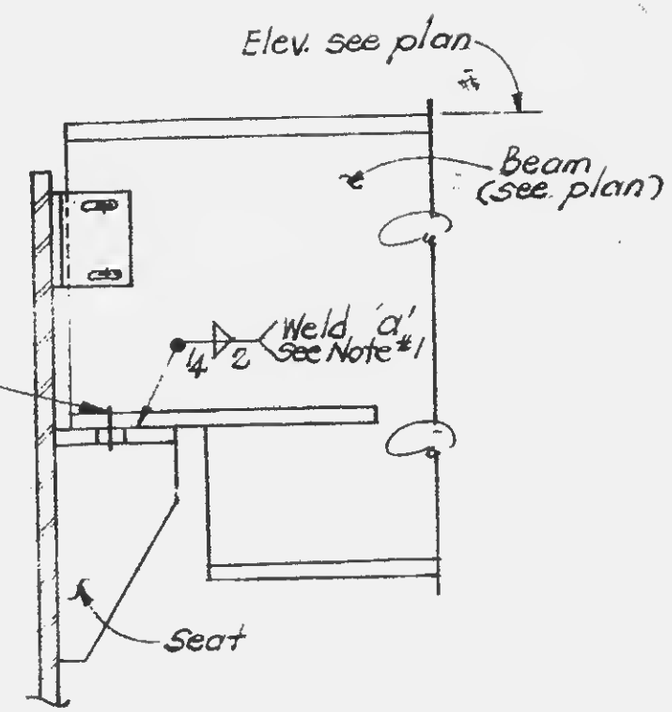

TYPE B

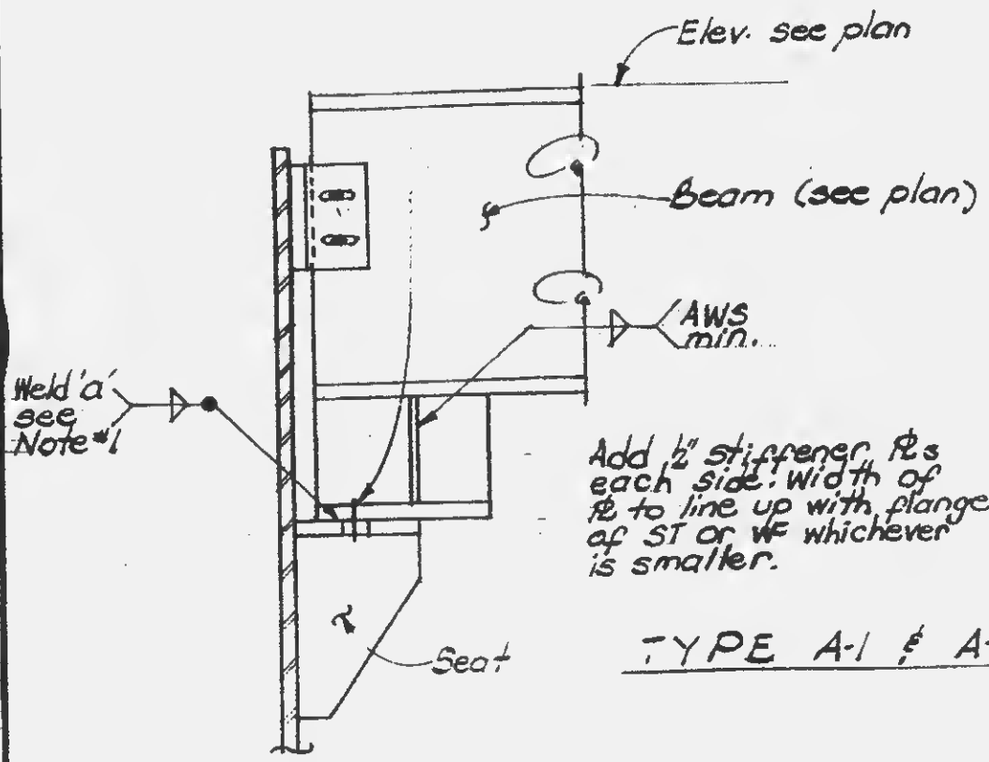

Add 1/2" stiffener PLs each side. Width of PL to line up with flange of ST or WF whichever is smaller.

TYPE A-1 & A-2

Notes:

2. Detail of seat connections same as shown on 12-JK1-105 and 106, except added stiffener PL's in Type A-1 & A-2.

LICENSED PROFESSIONAL ENGINEER — LESLIE E. ROBERTSON — No. 34360 — STATE OF NEW YORK

DESIGNED

DRAWN: S.C.

REVIEWED: E.L.

12-JK3-5